

Janus[®]

THE BEST QUALITY AT THE BEST PRICE

21.45"

LED MONITOR



J2260FLHD

FULL
HD
1920x1080



HDMI



VGA



AUDIO



POWER

 
FLAT
Screen

www.janus.com.co

CONTENTS

WARNING / CAUTION	3
WARNING/CAUTION	3
FCC NOTICE	3
Caution	3
Important Safety Instructions	4
Basic instruction	5
Equipment subassembly	5
Input voltage	5
Power indicator light	5
Keys Function	5
Connection	6
On Screen Display (OSD)	7
Menu options	7
Main menu	7
Explanation of individual options	7

WARNING / CAUTION

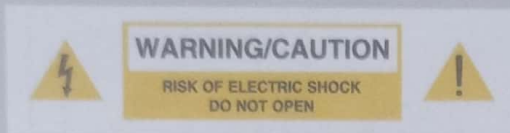

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC NOTICE

Class B digital device

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

Caution

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Do not attempt to modify this product in any way without written authorization from the dealer. Unauthorized modification could void the user's authority to operate this product.

To prevent fire or shock hazards, do not expose this product to rain or moisture.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with a dry and soft cloth.
7. Do not block any ventilation openings.
Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or any other apparatus (including amplifiers) that produces heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the unit. When a cart is used, use caution when moving the cart/monitor combination to avoid injury from tip-over.



 
 
 
 
13. Unplug this product during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not expose this product to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the unit.

BASIC INSTRUCTION



Equipment subassembly

Please check your monitor equipment subassembly including the followings:

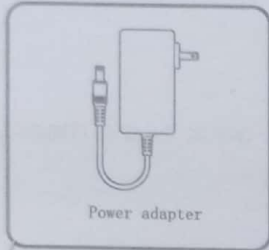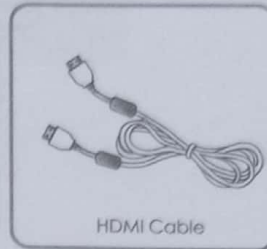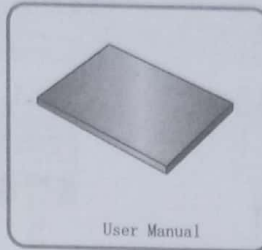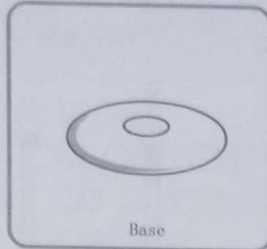

Input voltage

AC 100 - 240V ~ 50 / 60 Hz 1.1A

DC 12V = 2.5A, 3A, 4A

Please consult the back label .

Power indicator light


Indicator	Mode
No light	Power off
Green light	Normal work statement
Green light flash	No signal input

Keys Function


5 Keys Model	
Key	Function
① MENU	Show OSD menu/select function
② DOWN	Move icon down/decrease value
③ UP	Move icon up/increase value
④ EXIT	Back to last menu/Auto adjust
⑤ ⏻	Turn ON / OFF monitor

CONNECTION

 Connecting cables

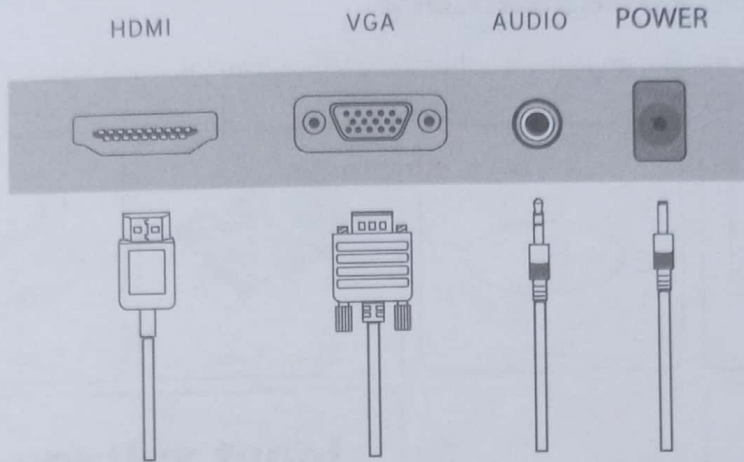

 Connect the power cord for your monitor to the DC IN port on the back of the monitor.
 Plug the power cord for the monitor into a nearby outlet.
 Use a connection appropriate for your computer.



[VGA IN]

VGA interface(pins function)

PIN	FUNCTION	PIN	FUNCTION
1.	RED	9.	+5V
2.	GREEN	10.	GND
3.	BLUE	11.	RSX
4.	RTS	12.	DDC-DATA
5.	GND	13.	H-SYNC
6.	GND-R	14.	V-SYNC
7.	GND-G	15.	DDC-CLOCK
8.	GND-B		

ON SCREEN DISPLAY (OSD)



Menu Options

Main Menu:

1. BRIGHTNESS
2. IMAGE
3. COLOR TEMP
4. OSD SETTING
5. RESET
6. MISC

Explanation of individual options:

1. Brightness

1.1 Brightness adjustment

This option will adjust your displays brightness. Use the up and down buttons to increase or decrease brightness setting.

1.2 Contrast adjustment

This option will adjust the amount of difference between white values and black values. Use the up and down buttons to increase or decrease contrast setting.

1.3 Black equalizer adjustment

Use the up and down buttons to increase or decrease black equalizer setting.

1.4 Low blue adjustment

 
Use the ON/OFF option to adjust the low blue function.

1.5 ECO adjustment

This option will allow to choice STANDARD/GAME/MOVIE/TEXT/FPS/RTS mode.

1.6 DCR function

Press MENU to shows the main choice menus,press MENU into DCR choice item,press up or down to select ON or OFF,press MENU to open or close DCR function.

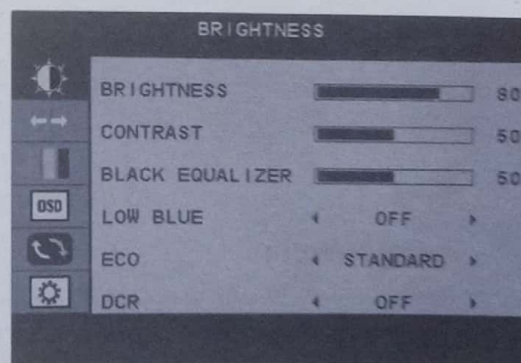

ON SCREEN DISPLAY (OSD)

2. Image

2.1 Horizontal position adjustment

This selection will adjust the horizontal position of the video on your display. This mode is only available in VGA mode. Use the up and down buttons to move your video display area left to right.

2.2 Vertical position adjustment

This selection will adjust the vertical position of the video on your display. This mode is only available in VGA mode. Use the up and down buttons to move your video display area up and down.

2.3 Clock adjustment

To press menu into main choice menus, press menu into Clock adjustment, and then press up or down to adjust.

2.4 Phase adjustment

 
To press menu into main choice menus, press menu into Phase adjustment, and then press up or down to adjust.

2.5 Aspect adjustment

Choose screen size, like Wide(16:9), 4:3 or Auto.

2.6 FREE SYNC adjustment

Press MENU into FREE SYNC choice item, press up or down to select ON or OFF.

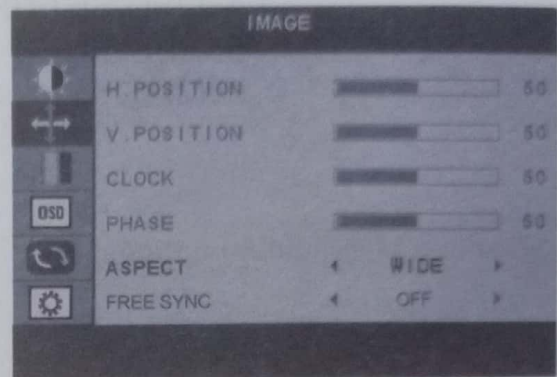

3. Color Temp.

3.1 This selection will change the amounts of red, green, and blue present in the image. Warm mode will give more red, Cool mode will give more blue and User mode will allow you to make your own adjustments to the red, green and blue levels.

3.2 HDR adjustment

Press MENU into HDR choice item, press up or down to select ON or OFF.



4. OSD Setting

4.1 Language adjustment

This selection will allow you to select the language you want the menu to appear in.

4.2 OSD H-position adjustment

This selection will change the horizontal position of the On Screen Display Menu. Use the up and down buttons to change the position left to right.

4.3 OSD V-position adjustment

 
This selection will change the vertical position of the On Screen Display Menu. Use the up and down buttons to move the display up and down.

4.4 OSD Timer

This selection will adjust OSD menu display time on the screen.

4.5 Transparency

This selection will adjust OSD menu transparency on the screen.

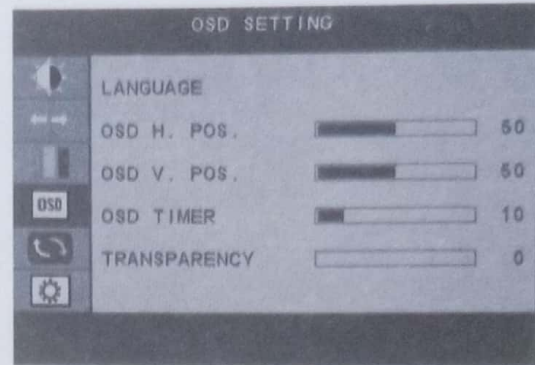

5. Reset

5.1 Image Auto adjustment

This selection will automatically adjust your image setting to the best viewing. This mode is only available in VGA mode.

5.2 Color Auto adjustment

This selection will automatically adjust your color setting to the best viewing. This mode is only available in VGA mode.

5.3 Reset

 
This selection will reset the monitor to factory statement.

5.4 Auto Power down adjustment

Open this function, display will soft power off automatically after standby 60S.

5.5 Timecount adjustment

This selection will adjust timecount setting, 10min, 20min, 30min, 40min, 50min, 60min, 90min.

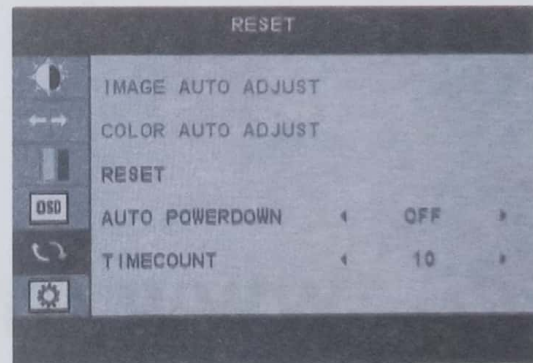

6. Misc.

6.1 Signal source adjustment

 
Press UP or DOWN to select VGA, HDMI source.

6.2 Mute adjustment

This selection will all allow you to open or close mute.

6.3 Volume adjustment

Press UP and DOWN to adjust the volume.

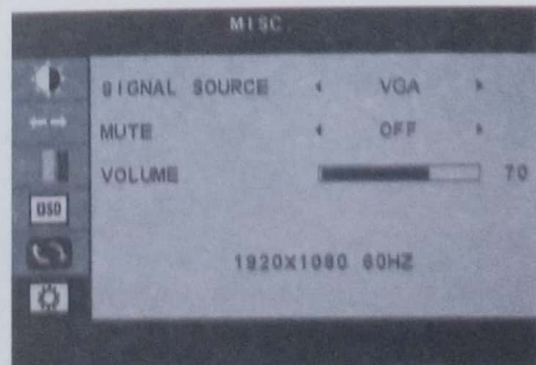

Janus®

THE BEST QUALITY AT THE BEST PRICE

www.janus.com.co



www.janus.com.co